

CASIO®

CASIO COMPUTER CO., LTD.
6-2, Hon-machi 1-chome
Shibuya-ku, Tokyo 151-8543, Japan

MO9807-B Printed in China
HA310650B-1

**SF-3300/
3600**

User's Guide
Guía del usuario

CASIO®

ES

English	E-1
Español	S-1

English

Congratulations on your selection of this CASIO product! Be sure to keep this manual in a safe place for future reference when necessary.

Contents

 
Read this first!	E-3
Timekeeping Function	E-6
Alarm Function	E-8
Inputting Characters	E-9
Recalling Data	E-12
Editing Data	E-13
Secret Memory Area	E-13
Memory Capacity Display	E-15
Calculator Mode	E-15
About the Power Supply	E-16
Messages	E-18
World Time City Table	E-19
Specifications	E-20

Read this first!


■ **Before using the unit for the first time**

Use the following procedure to load batteries and reset the unit before using it for the first time.

1. Slide the battery compartment cover in the direction indicated by the arrow.

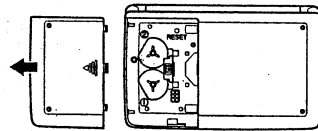

 2. Slide the battery switch to the "REPLACE ①" setting.

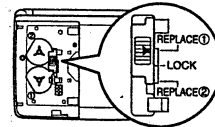

3. Load the new battery into the battery compartment, making sure that the positive (+) side of the new battery is facing up (so you can see it).
4. Slide the battery switch to the "REPLACE ②" setting and repeat step 3 for the other battery.
 - Be sure to load two new CR2032 batteries only. Never mix an old battery with a new one.
5. Slide the battery switch to the "LOCK" setting.
 - You will not be able to turn the unit on if the battery switch is not in the "LOCK" setting.
6. Press RESET button. "RESET?" appears on the display.

7. Press **SET** to reset or any other key to abort.

• **Initial settings after RESET**

Home Time Zone: New York (NYC)
Home Time: 12:00AM, January 1, 1996
World Time Zone: London (LON)
12/24-Hour Setting: 12-hour

8. Replace the battery compartment cover.

■ **Keep written copies of important data.**

CASIO COMPUTER CO., LTD. assumes no responsibility for any damage or loss caused by deletion of data as a result of malfunction, repairs, or removal of both batteries.

■ **Important Precautions**

- Keep away from direct flame.
- Keep away from heat: direct sunlight, near heaters, etc.
- Never try to disassemble the unit.
- Clean exterior only with a soft cloth moistened in a weak solution of a mild neutral detergent and water.
- Items described in this manual are subject to change without notice.
- CASIO COMPUTER CO., LTD. assumes no responsibility for any loss or claims by third parties which may arise from the use of this product.

■ **About the EL backlight**

- This unit is equipped with an EL backlight that allows easy viewing of display contents in a theater, or anywhere else where lighting is dim.
- Note, however, that frequent or extended use of the EL backlight shortens battery life.

The following shows how backlight use affects battery life under controlled test conditions.*

Backlight Operation	Battery Life
Twice per day	Approximately 1 year
10 times per day	Approximately 6 months

• **Test Conditions**

- "Battery Life" is the time before battery failure when the unit is left on for one hour each day (5 minutes operation, 55 minutes display only, no operation), with one alarm operation plus the number of backlight operations shown above.
- "Backlight Operation" is the number of times the backlight is turned on (for eight seconds) per hour during display only (no operation).

■ **About the Low Battery Message**

Replace the batteries as soon as possible after the "LOW BAT" (Low battery) message appears.

- When battery power is low, the "LOW BAT" message will appear after you press **ON/OFF**, **TEL**, **SCHEDULE**, **MEMO/TO DO** or **TIME/ALARM**. If you continue to operate the unit without battery replacement, power will switch off automatically.
- The Daily Alarm and backlight will not operate while battery power is low.

To adjust display contrast

 
1. Press **CAL** to enter the Calculator Mode.
2. Press **▲** to increase contrast (making the figures on the display darker) or **▼** to decrease contrast (making the figures lighter).

Timekeeping Function

Each press of **TIME/ALARM** changes between the Home Time, World Time, and Alarm.

To change the World Time city

Use **TIME/ALARM** to display the World Time and then use \uparrow and \downarrow to scroll through the cities.




To set the Home Time city

Example

City: HKG (Hong Kong)

Key Operation	Display
TIME/ALARM	FRI HOME 1999-11-1 12-05 20 A
EDIT (about 2 seconds)	NYC -999-01-01 12-05 A
\uparrow/\downarrow • Scroll through city names until HKG appears	HKG -999-01-01 12-05 A
SET • This resets the seconds to 00.	FRI HOME 1999-11-1 12-05 00 A

 To set the Home Time

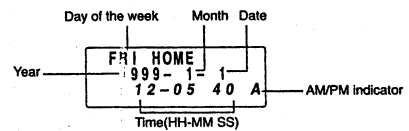

Example

Date: 1999-11-17 (November 17, 1999); Time: 9:45 PM

Key Operation	Display
TIME/ALARM	FRI HOME 1999-11-1 12-05 20 A
EDIT (about 2 seconds)	HKG -999-01-01 12-05 A
19991117 P 0945 • Press A to specify AM and P for PM. AM is indicated on the display by "A", while PM is indicated by "P".	HKG -999-11-17 09-45 P
SET • This resets the seconds to 00.	WED HOME 1999-11-17 9-45 00 P

- Be sure to input leading zeros when necessary.
- Use the following to specify noon and midnight.

	Noon	Midnight
12-hour format	12 PM	12 AM
24-hour format	12	00

To switch between standard and daylight saving time

1. Display the Home Time or World Time.
 2. Press **DST**.
- You must make separate settings for Home Time and World Time.
 - Changing the setting of one World Time city affects all World Time cities.

WED HOME DST DST Indicator
 1999-11-17
 10-45 10 P

 
To switch between 12-hour and 24-hour format

1. Display the Home Time.
2. Press 12/24 to change between 12-hour and 24-hour timekeeping.

Alarm Function

- The alarm sounds for 20 seconds when the alarm time is reached.
- To stop the alarm when it is sounding, press any key.

To set the alarm time




Example
 8:05 PM

Key Operation	Display
TIME/ALARM TIME/ALARM TIME/ALARM	ALM OFF 12-00 A
EDIT	ALM 2-00 A
0805 P • Press A to specify AM and P for PM. AM is indicated on the display by "A", while PM is indicated by "P".	ALM 8-05 P
SET	ALM ON 8-05 P

To turn alarms on and off

 1. Press TIME/ALARM TIME/ALARM TIME/ALARM to display the alarm screen.
2. Press 7.
3. Use ▲ and ▼ to change between displays as shown below, and ◀ and ▶ to select "Y" (on) or "N" (off).

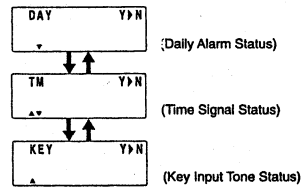

4. Press SET to return to the alarm screen.

Inputting Characters

- SF-3300 memory (total of Telephone Directory, Schedule Keeper, Memo and To Do) can hold up to 32,701 characters, while SF-3600 memory can hold up to 65,470 characters.
- You can input alpha-characters, numbers or symbols while the cursor is in the top line or second line of the display (text area). Only numbers can be input while the cursor is in the third line (number area).
- To input a symbol, press SHIFT (so the [SHIFT] indicator is on the display) and then press the key for the symbol you want to input.
- To input a return, press ↵.
- While in the number area, press - to input a hyphen.
- To input a space, press SPACE.
- To change a character, use ◀ and ▶ to move the cursor and then input the new character.
- To delete all input characters, press CLEAR.

To Input Telephone Directory data

- Name: 28 characters; e-mail address: 42 characters; telephone number: 24 digits; fax number: 24 digits; pager number: 24 digits; cell phone number: 24 digits

Example

Name: CASIO; e-mail address: ABCD@XYZ.COM (abcd@xyz.com); Tel: 045-012-3456; Fax: 045-012-7890; Pager: 045-987-6543; Cell Phone: 045-654-3210

Key Operation	Display
TEL	NAME? .
CASIO SET	E-MAIL/ADD? .
ABCD SHIFT @ XYZ.COM SET	TEL#? .
045-012-3456 SET	FAX#? .
045-012-7890 SET	PAGER#? .
045-987-6543 SET	CELL#? .
045-654-3210 SET	NAME? .

- Data is automatically sorted into alphabetical sequence according to the names.

To Input Schedule Keeper data

- Up to 56 characters per data item.

Example

Meeting on December 5, 1999 from 2PM

Key Operation	Display
SCHEDULE	SCH? .
MEETING SET	DATE/TIME? 1999-11-17 12-00 A
19991205	DATE/TIME? 1999-12-05 -2-00 A
0200 P SET	SCH? .

- Press A to specify AM and P for PM. AM is indicated on the display by "A", while PM is indicated by "P".

- Schedule Keeper data is sorted by date and time.

To Input Memo data

- Up to 56 characters per data item.

Example

JODY BIRTHDAY, 10-5 (October 5)

Key Operation	Display
MEMO/TO DO	MEMO? .
JODY SPACE BIRTHDAY ↵	JODY BIRTHDAY .
10-5 SET	MEMO? .

- Memo data is not sorted.

To input To Do data

- Up to 56 characters per data item.

Example
CALL BILL

Key Operation	Display
MEMO/TO DO MEMO/TO DO	DO WHAT? ✓
CALL SPACE BILL	CALL BILL ✓
SET	DO WHAT? ✓

- To Do data is not sorted.

Recalling Data

The indicators ▲ and ▼ on the screen indicate that data exists above or below the displayed data. Use ▲ and ▼ to scroll the screen and view the other data.

- Indicators on the left side of the Telephone Directory screen show what kind of data is currently displayed. The display indicators are: NAME (name), E-MAIL (e-mail), TEL (telephone number), PAGER (pager number), FAX (fax number), and CELL (cell phone number).
- When scrolling Telephone Directory data, pressing ▼ first shows the name entry along with the telephone number. Pressing ▼ next scrolls to the e-mail entry in the text area, leaving the phone number in the number area. Pressing ▼ after the e-mail entry is displayed scrolls between the telephone number, fax number, pager number and cell phone number in the text area of the display. Pressing ▲ scrolls through the data in reverse of the sequence described above.

• Scroll Search

1. Use TEL, SCHEDULE or MEMO/TO DO to enter the mode (Telephone Directory, Schedule Keeper, Memo, To Do) that contains the data you want.
2. Use ▼ to scroll down, ▲ to scroll up. Hold down to scroll at high speed.

• Initial Character Search

1. Use TEL or SCHEDULE to enter the mode (Telephone Directory, Schedule Keeper) that contains the data you want.
2. Input the initial characters of the data you want.
3. Press ▲ or ▼ to start the search.
4. If you get more than one, you can scroll.

Editing Data

To edit data

1. Recall data and press EDIT.
2. Input data as you normally would.

To delete data

1. Recall data.
2. Press SHIFT DELETE and the message "DEL?" appears on the display.
3. Press SET to delete or any other key to abort.

Secret Memory Area

Important!

If you forget your password, you will have to RESET and delete everything in memory!

15% add-on of 2500	2500 [X] 15 [%] [P]	2875.
25% discount of 3500	3500 [X] 25 [%] [-]	2625.
What will the selling price and profit be when the purchasing price of an item is \$480 and the profit rate to the selling price is 25%?	480 [P] 25 [%] [-]	640.
		160.
		(Profit)
If you made \$80 last week and \$100 this week, what is the percent increase?	100 [-] 80 [%]	25.
80 x 9 = 720	[AC] [MC] 80 [X] 9 [M]	M 720.
-) 50 x 6 = 300	50 [X] 6 [M]	M 300.
20 x 3 = 60	20 [X] 3 [M]	M 60.
480	[MR]	M 480.

 
About the Power Supply

Caution

- All data stored in memory is lost if you remove both batteries at the same time.
- Replace the batteries at least once every two years, no matter how much you use the unit.
- Be sure that you keep a separate copy of all important data that you store in the unit.


To replace the batteries

1. Press OFF to switch power OFF.
2. Slide the battery compartment cover in the direction indicated by the arrow.

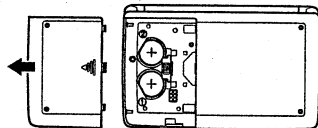

E-16

 3. Slide the battery switch to the "REPLACE ①" setting. Insert a thin, pointed object into (A) and remove the old battery.

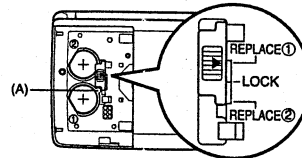

Caution

Be sure to remove only one battery at a time. Otherwise, you will lose all data stored in memory.

4. Replace the old battery with a new one, making sure that the positive (+) side of the new battery is facing up (so you can see it).
5. Slide the battery switch to the "REPLACE ②" setting and repeat step 4 for the other battery.
- Be sure to load two new CR2032 batteries only. Never mix an old battery with a new one.
6. Slide the battery switch to the "LOCK" setting.
- You will not be able to turn the unit on if the battery switch is not in the "LOCK" setting.
7. Replace the battery compartment cover.

Battery Precautions

- Keep + side of each battery facing up (so you can see it).
- Keep batteries out of the reach of small children. If swallowed, consult with a physician immediately.

E-17

Messages

Message	Remarks
FULL	• Delete some data in memory to make room for the new data.
NO RECORD	• There is no data in memory.
NOT FOUND	• No data in memory matches your specification.
PASS?	• Your operation requires entry into the secret memory area. Input the password.
LOW BAT	• Battery power is low. Replace the batteries.

World Time City Table

Code	City Name	Time Difference	Other Cities in Zone
-11	(GMT-11)	- 11	Midway
HNL	Honolulu	- 10	
ANC	Anchorage	- 09	San Francisco, Seattle, Las Vegas El Paso
LAX	Los Angeles	- 08	
DEN	Denver	- 07	
CHI	Chicago	- 06	
NYC	New York	- 05	
CCS	Caracas	- 04	Dallas, Mexico City, Houston Washington D.C., Boston, Montreal Santiago
RIO	Rio de Janeiro	- 03	
-2H	(GMT-2)	- 02	São Paulo, Buenos Aires
-1H	(GMT-1)	- 01	
LON	London	+ 00	Azores
PAR	Paris	+ 01	
CAI	Cairo	+ 02	Greenwich Mean Time Rome, Madrid, Amsterdam
JED	Jeddah	+ 03	
THR	Tehran	+ 03:30	Athens, Helsinki, Beirut, Jerusalem Kuwait, Nairobi
DXB	Dubai	+ 04	
KBL	Kabul	+ 04:30	Abadan, Shiraz Abu Dhabi
KHI	Karachi	+ 05	
DEL	Delhi	+ 05:30	Bombay, Calcutta, Colombo
DAC	Dhaka	+ 06	
RGN	Yangon	+ 06:30	Jakarta, Hanoi
BKK	Bangkok	+ 07	
HKG	Hong Kong	+ 08	Beijing, Taipei, Singapore, Manila Seoul, Pyongyang
TYO	Tokyo	+ 09	
ADL	Adelaide	+ 09:30	Darwin Guam
SYD	Sydney	+ 10	
NOU	Nourmea	+ 11	Port Vila Auckland
WLG	Wellington	+ 12	

Specifications

Español

Model: SF-3300/3600

Memory capacity: 32,701 bytes (SF-3300) /65,470 bytes (SF-3600)

Power supply: Two lithium batteries (CR2032)

Power consumption: 0.1 W

Battery life: Approximately 1 year under the following test conditions:
Unit turned on one hour each day (5 minutes operation, 55 minutes no operation), with two backlight operations and one Daily Alarm operation per day.

Auto Power Off: Approximately 6 minutes after last key operation

Ambient temperature range: 0°C-40°C (32°F-104°F)

Dimensions: Folded: 14.6 (H) x 132 (W) x 82 (D) mm

(⁵/₈" (H) x 5¹/₄" (W) x 3¹/₄" (D))

Unfolded: 11.3 (H) x 132 (W) x 160 (D) mm

(⁵/₈" (H) x 5¹/₄" (W) x 6¹/₄" (D))

Weight: SF-3300: 105 g (3.7 oz) /SF-3600: 105 g (3.7 oz) including batteries

¡Enhorabuena por haber seleccionado este producto CASIO! Para poder efectuar futuras consultas, asegúrese de guardar este manual en un lugar seguro.

This file has been downloaded from:

www.UsersManualGuide.com

User Manual and User Guide for many equipments like mobile phones, photo cameras, mother board, monitors, software, tv, dvd, and othes..

Manual users, user manuals, user guide manual, owners manual, instruction manual, manual owner, manual owner's, manual guide, manual operation, operating manual, user's manual, operating instructions, manual operators, manual operator, manual product, documentation manual, user maintenance, brochure, user reference, pdf manual