

ÖKO-ARCTIS  
ÖKO-ARCTIS SUPER  
1243-4 GS  
1273-4 GS




Table Top Freezer

Operating Instructions

## Dear customer,

Before placing your new refrigerator/freezer into operation please read these operating instructions carefully. They contain important information for safe use, for installation and for care of the appliance.

Please keep these operating instructions for future reference. Pass them on to possible new owners of the appliance.

These operating instructions are for use with several technically comparable models with varying accessories. Please observe the notes which apply to your model.



Notes which are important for your safety or for the proper functioning of the appliance are stressed with a warning triangle and/ or with signal words (**Warning!**, **Caution!**, **Important!**). Please observe the following carefully.



This symbol guides you step by step in the operation of the appliance.



Supplementary information regarding operation and practical applications of the appliance appear after this symbol.



Tips and notes concerning economical and environmentally sound use of the appliance are marked with the cloverleaf.

The operating instructions contain instructions for the correction of possible malfunctions by the user in the section "What to do if ...". If these instructions should not be sufficient, our customer service department is always available to you.

Printed on paper manufactured with environmentally sound processes  
for the person who thinks ecologically acts accordingly...

# Contents

<b>Important Safety Instruction</b> .....	4
<b>Disposal</b> .....	6
Appliance Packaging Information .....	6
Disposal of old Appliances .....	6
<b>Remove transport safeguard.</b> .....	6
<b>Installation</b> .....	7
Installation Location .....	7
Your freezer needs air .....	8
Electrical Connection .....	8
Plug socket .....	9
Rehingeing the door .....	9
<b>Prior to Initial Start-Up</b> .....	10
Description of the appliance .....	10
Operating and indicator panel .....	11
Audible temperature alarm .....	12
<b>Starting up and temperature regulation</b> .....	12
Ice pack .....	13
<b>Freezing and storing frozen food</b> .....	13
<b>Storage Goods Symbol/Freezing Calendar</b> .....	15
<b>Preparation of Ice Cubes</b> .....	15
<b>Defrosting and cleaning.</b> .....	15
<b>Magnetic door seal</b> .....	17
Switching off the appliance .....	17
If you should ever move house .....	18
<b>Energy Saving Tips</b> .....	18
What to do if ... ..	18
Correcting Malfunctions .....	18
<b>Service &amp; Spare Parts</b> .....	21
<b>Help us to Help You</b> .....	21
<b>Customer Care</b> .....	21
<b>Regulations, Standards, Guidelines</b> .....	22



## Important Safety Instructions

These warnings are provided in the interests of your safety. Ensure you fully understand them before installing or using the appliance. Your safety is of paramount importance. If you are unsure about the meaning of these warnings contact the Customer Care Department for assistance.

### Intended use

- The freezer is intended for use in the home. It is suitable for the freezing and storing frozen food, as well as for making ice. If the appliance is used for purposes other than those intended or used incorrectly, no liability can be accepted by the manufacturer for any damage that may be caused.
- Alterations or changes to the freezer are not permitted for reasons of safety.
- If you use the freezer in a commercial application or for purposes other than the freezing or frozen storage of foods, please observe all valid legal regulations for your application.

### Prior to initial start-up

- Check the appliance for transport damage. Under no circumstance should a damaged appliance be plugged in! In the event of damage, please contact your supplier.

### Refrigerant

The refrigerant isobutane (R600a) is contained within the refrigerant circuit of the appliance, a natural gas with a high level of environmental compatibility, which is nevertheless flammable.

- During transportation and installation of the appliance, be certain that none of the components of the refrigerant circuit become damaged.
- If the refrigerant circuit should become damaged:
  - avoid open flames and sources of ignition;
  - thoroughly ventilate the room in which the appliance is situated.

### Safety of children

- Packaging (e.g. wraps, polystyrene) can be dangerous for children. There is a risk of suffocation! Keep packaging material away from children!
- Please make old appliances unusable prior to disposal. Pull out the mains plug, cut off the mains cable, break or remove spring or bolt catches, if fitted. By doing this you ensure that children cannot lock

themselves in the appliance when playing (there is risk of suffocation!) or get themselves into other dangerous situations.

- Often children cannot recognise the hazards present in household appliances. It is therefore important that you ensure adequate supervision and never let children play with the appliance!

### **Daily Operation**

- Containers with flammable gases or liquids can leak at low temperatures. There is a risk of an explosion! Do not store any containers with flammable materials such as, for example, spray cans, fire extinguisher refill cartridges etc in the refrigerator/freezer.
- Bottles and cans must not be placed in the freezer. They can burst when the contents freeze, high carbonate content drinks can even explode! Never store lemonade, juices, beer, wine, sparkling wine etc. in the freezer. Exception: high alcohol content spirits can be stored in the freezer.
- Do not put ice creams or ice cubes in the mouth immediately after removal from the freezer. Very cold ice can freeze to the lips or tongue and cause injury.
- Do not touch frozen food with wet hands. Your hands could freeze to the food.
- Do not operate any electrical appliances in the refrigerator/freezer (e.g. electric ice cream makers, mixers etc.).
- Before cleaning the appliance, always switch off the appliance and unplug it, or pull the house fuse or switch off the circuit breaker.
- When unplugging always pull the plug from the mains socket, do not pull on the cable.

### **In case of malfunction**

- If a malfunction occurs on the appliance, please look first in the "What to do if ..." section of these instructions. If the information given there does not help, please do not perform any further repairs yourself.
- Refrigerators/freezers may only be repaired by competent service engineers. Improper repairs can give rise to significant hazards. If your appliance needs repairing, please contact your specialist dealer or our Customer Service.

# Disposal

## Appliance Packaging Information

All materials are environmentally sound! They can be dumped or burned at an incinerating plant without danger!

About the materials: The plastics can be recycled and are identified as follows:

>PE< for polyethylene, e.g. the outer covering and the bags in the interior.

>PS< for polystyrene foam, e.g. the pads, which are all free of chloro-fluorocarbon.

The carton parts are made from recycled paper and should be disposed of at a waste-paper recycling collection location.

## Disposal of old Appliances

For environmental reasons, refrigeration appliances must be disposed of properly. This applies to your old appliance, and - at the end of its service life - for your new appliance as well.



**Warning!** Before disposing of old appliances make them inoperable. Remove plug from mains, sever the power cable, remove or destroy any snap or latch closures. This eliminates the danger that playing children lock themselves into the appliance (danger of suffocation!) or place themselves into other life-endangering situations.

### Disposal:

- The appliance may not be disposed of with domestic waste or bulky refuse.
- The refrigerant circuit, especially the heat exchanger at the back of the appliance, may not be damaged.
- Information concerning collection schedules or locations can be obtained from the local disposal authorities or town hall.

## Remove transport safeguard

The appliance and the interior fittings are protected for transport.



Pull off the adhesive tape on the left and right side of the door.



You can remove any remnants of adhesive using white spirit.



Remove all adhesive tape and packing pieces from the interior of the appliance.

## Installation

### Installation Location

The appliance should be set up in a well ventilated, dry room.

Energy use is affected by the ambient temperature.

The appliance should therefore

- not be exposed to direct sunlight;
- not be installed next to radiators, cookers or other sources of heat;
- only be installed at a location whose ambient temperature corresponds to the climate classification, for which the appliance is designed.

The climate classification can be found on the serial plate, which is located at the left on the inside of the appliance.

The following table shows which ambient temperature is correct for each climate classification:

Climate classification	for an ambient temperature of
SN	+10 to +32 °C
N	+16 to +32 °C
ST	+18 to +38 °C
T	+18 to +43 °C

If the refrigeration appliance is installed next to another refrigerator or freezer a clearance of 5 cm at the sides is required, in order to prevent the formation of condensation on the outside of the appliance.

## Your freezer needs air

Your freezer is designed for maintenance-free operation. It should never lack good ventilation. Air is supplied under the ventilation slot between the freezer and storage surface. Air is extracted through the upper ventilation grille. Never obstruct these openings.

## Electrical Connection

Any electrical work required to install this appliance should be carried out by a qualified electrician or competent person.



### **WARNING – THIS APPLIANCE MUST BE EARTHED**

**The manufacturer declines any liability should these safety measures not be observed.**

Before switching on, make sure the electricity supply voltage is the same as that indicated on the appliance rating plate. The rating plate is inside, on the left.

The appliance is supplied with a 13 amp plug fitted. In the event of having to change the fuse in the plug supplied, a 13 amp ASTA approved (BS 1362) fuse must be used.

### **Important**

The wires in the mains lead are coloured in accordance with the following code:

Green and Yellow/Earth  
Blue Neutral  
Brown/Live

As the colours of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

- 1.The wire coloured green and yellow must be connected to the terminal marked with the letter "E" or by the earth symbol or coloured green and yellow.
- 2.The wire coloured blue must be connected to the terminal "N" or coloured black.
- 3.The wire coloured brown must be connected to the terminal marked "L" or coloured red.
- 4.Upon completion there must be no cut, or stray strands of wire present and the cord clamp must be secure over the outer sheath.





**Warning!** A cut-off plug inserted into a 13 amp socket is a serious safety (shock) hazard. Ensure that the cut-off plug is disposed of safely.

## Plug socket

The plug socket necessary for connection of your appliance to the electricity supply should be positioned so that it is possible to pull out the appliance plug.

A concealed spur socket requires 10 A/16 A fusing.

## Rehingeing the door

The side at which the door opens can be changed from the right side (as supplied) to the left side, if the installation site requires.



**Warning!** When changing the side at which the door opens, the appliance may not be connected to the mains. Remove plug from the mains beforehand.




Tilt the appliance slightly towards the rear and prop it securely.



Unscrew the door hinge screws (K) and take the door bearing (1) downwards out of its cavity.



Open the door a little way and take it out downwards.

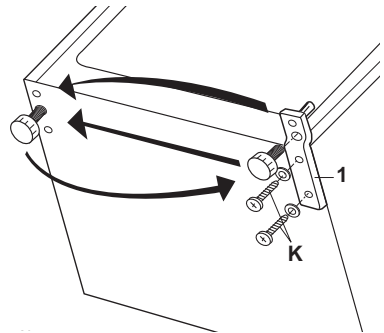


Unscrew the upper pin (A) and screw it into place on the opposite side.




Fit the door into the upper pin (A) and close it.



Insert the pin of the door bearing (1) into the left hand cavity and screw the bearing firmly into place with the screws (K).

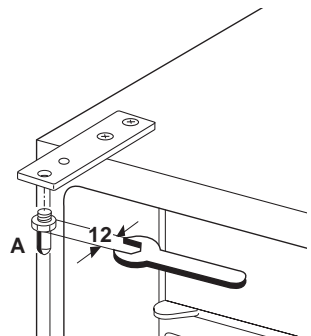


- ➔ Unscrew the handle. Refit it on the opposite side after having pushed in the plugs with a punch. Cover the holes left open with the plugs contained in the documentation pack.

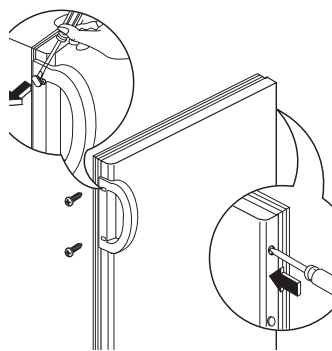

## Prior to Initial Start-Up

- ➔ Please clean the appliance interior and all accessories prior to initial start-up (see section: "Cleaning and Care").
- ➔ Remove the ice pack from the appliance.
- ➔ Only put the ice pack to freeze in the top drawer after the optimal storage temperature of  $-18\text{ }^{\circ}\text{C}$  has been reached.
- ➔ Re-freeze thawed ice packs in the same way, e. g. after cleaning the appliance.


## Description of the appliance

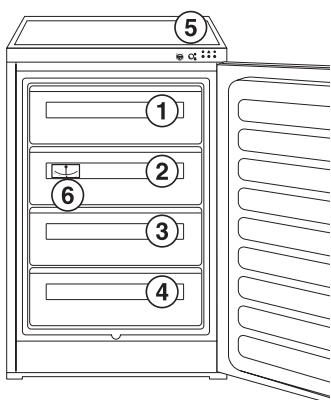

- 1 Drawer for storage and freezing
- 2 Drawer for storage and freezing
- 3 Drawer for storage
- 4 Drawer for storage
- 5 Control panel
- 6 Temperature display

The freezer drawers are stable and have an antitilt feature, and are also retained at their end positions. This assures safe and convenient insertion and removal of frozen food. To remove them, withdraw them as far as the catch, tilt them upwards, and pull them out forwards.

# Operating and indicator panel

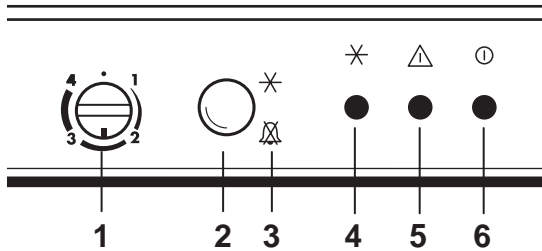


- 1 Temperature regulator and ON/OFF switch
- 2 Fast freeze button
- 3 Symbol for the door warning tone
- 4 Fast freeze light (amber)
- 5 Warning light (red)
- 6 Pilot light (green)

The **temperature regulator (1)**, which serves at the same time as the appliance's On-/Off switch.

The **green pilot light (6)**, which comes on when the panel is switched on and the mains voltage is available. In this switch position, the refrigerating unit automatically operates by system control.

The **temperature regulator (1)**, which can be used for continuously variable setting of the most energy saving storage temperature for your frozen food. The optimum storage conditions occur at  $-18^{\circ}\text{C}$  and can be checked at the **thermometer (fig.)**.

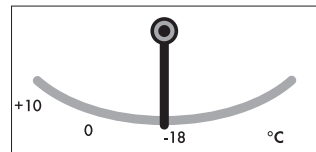

The **fast-freeze switch (2)** with its **amber pilot light (4)**. The amber pilot light comes on when the switch (2) has been operated. The refrigerating unit then operates continuously.

The **red temperature pilot light (5)** comes on when:

- the appliance has been started up but the storage temperature has not yet been attained;
- the minimum storage temperature is no longer being maintained (fault);
- excessive amounts of fresh food are placed inside; or
- if the appliance door is open for too long.




**Important note:** if you operate the fast-freeze switch or adjust the temperature regulator, your appliance's refrigeration motor may not start immediately, but does after some time. This does not mean that your appliance has a fault.

## Audible temperature alarm

If your freezer is equipped with an audible temperature alarm (3), an acoustic warning will sound simultaneously with illumination of the red temperature pilot light, alerting you to the fact that the storage temperature in your freezer is too high or too warm. The audible warning sounds until the red temperature pilot light goes out or until the audible alarm is switched off by operation of the fast-freeze switch.

The fast-freeze switch can be switched off when the red lamp has gone out.

## Starting up and temperature regulation

-  Turn the temperature regulator (1) in the direction of "1".  
The green light (6) and the red light (5) come on, the audible warning sounds (if fitted), and the refrigeration motor starts up.
-  Additionally operate the fast-freeze switch (2).  
The amber pilot light (4) comes on, the audible warning switches itself off, and the refrigerator motor runs continuously.
-  Only when the red light (5) has gone out should you reset the fast-freeze switch (2) the amber light (4) goes out and the audible warning is activated again.

The temperature regulator (1) can be used to set the required storage temperature,  $-18^{\circ}\text{C}$  or colder.

**Setting "1" means:**

highest, warmest internal temperature

**Setting "4" means:**

lowest, coldest internal temperature

**Recommended regulator setting:**

1.5 to 2.

**Important:** Regularly check on the red temperature pilot light (5) and the thermometer that the required storage temperature is being maintained.

## Ice pack

There is an ice pack in one drawer of the freezer.

Refer to the section "Prior to Initial Start-Up" concerning freezing of the ice pack.



In the event of a power failure or malfunction, the ice pack will lengthen the amount of time it takes for the frozen food to become too warm by several hours.

The ice pack can only fulfil this task optimally if it is placed in the uppermost drawer, at the front, above the frozen food.

You can use the ice pack for cooling cold bags.

## Freezing and storing frozen food

You can use your freezer for freezing fresh food yourself.

### Important!

- The temperature in the freezer compartment must be  $-18^{\circ}\text{C}$  or colder before freezing food.
- Please observe the freezing capacity given on the rating plate. The freezing capacity is the maximum quantity of fresh food that can be frozen within a period of 24 hours. If you wish to freeze food several days in a row, please observe a maximum capacity of only  $2/3$  to  $3/4$  of that on the rating plate. The quality of the food is best preserved when it is frozen right through to the core as quickly as possible.
- Allow warm food to cool down before freezing. The warmth will cause increased ice formation and increase the power consumption.
- Please note the maximum storage times specified by the manufacturer.
- Thawed foods which have not been processed further (cooked into meals) may not under any circumstances be frozen a second time.
- Containers with flammable gases or liquids can leak at low temperatures. There is a risk of an explosion! Do not store any containers with flammable materials such as, for example, spray cans, fire extinguisher refill cartridges etc in the refrigerator/freezer.
- Bottles and cans must not be placed in the freezer. They can burst when the contents freeze, high carbonate content drinks can even explode! Never store lemonade, juices, beer, wine, sparkling wine etc. in the freezer.



Press the fast freeze button for freezing of fresh food. The amber light illuminates.

To utilise the maximum rated freezing capacity, switch on the fast freeze switch 24 hours before freezing is due to start (the amber light illuminates). For smaller amounts the fast freeze switch should be switched on 4 - 6 hours in advance.



All foods must be packed air tight prior to freezing, so that they do not dry out or lose their flavour, and so that no flavour contamination of other frozen goods occurs.

**Caution!** Do not touch frozen food with wet hands. Your hands could freeze to the food.



Place the packed food in the drawers. Place food to be frozen in the appliance's two top drawers (1) and (2) equipped with its own refrigerating unit. Unfrozen food must not touch items already frozen, otherwise the frozen food could begin to defrost. Freezer drawers (3) and (4) should only be used for storage of frozen food. The lowest drawer has a solid floor and can be used for catching some of the melt-water when the freezer is being defrosted. In order to enlarge the appliance's volume the two centre drawers (2) and (3) can be removed.



Place frozen foods in the drawers sorted by type, as far as possible. Index tabs are supplied for placing on drawers. To mark the contents of the individual drawers, press the index tab over the corresponding symbol (see "Frozen Food Symbols/Freezer Calendar" section). This will give you a better overview of the contents, avoid extended door opening and therefore save electricity.





Once the required storage temperature has been reached, press the fast freeze button again. The yellow light goes out.

#### Tips:

- The following are suited for the packaging of frozen goods:
  - freezer bags and polyethylene wraps;
  - special cans for frozen goods;
  - extra-thick aluminium foil.
- The following are suitable for sealing bags and wrap: plastic clips, rubber bands or tape.
- Smooth the air out of the bag before sealing; air makes it easier for the frozen food to dry out.
- Make flat packages, because these freeze more quickly.
- Do not fill cans for frozen goods to the brim with liquid or paste-like goods, because liquids expand during freezing.

# Storage Goods Symbols/Freezing Calendar

- The symbols on the drawers show different types of frozen goods.
- The numbers indicate storage times in months for the appropriate types of frozen goods. Whether the upper or lower value of the indicated storage time is valid depends on the quality of the foods and pre-treating before freezing. The lower value applies to foods with high fat content.
- By attaching the included index-tabs to the drawers, they can be marked according to which type of foods the individual compartments contain.

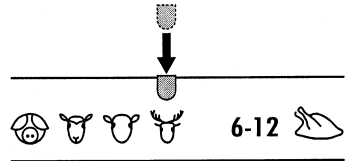

## Preparation of Ice Cubes

- ➡ Fill the ice cube tray 3/4 full with cold water, place it in the freezer compartment and leave to freeze.
- ➡ To loosen the frozen cubes, either bend the ice cube tray or hold it under running water for a few seconds.

**Important!** Never try to free an ice tray that is frozen to the freezer compartment using pointed or sharp edged objects. Use the ice scraper supplied.

## Defrosting and cleaning

During use and when the door is opened, moisture is deposited as frost inside the appliance, particularly on the evaporator. This frost must be removed from time to time using the soft plastic scraper supplied. Under no circumstances use hard or pointed objects for this purpose.

The freezer should always be defrosted when the layer of frost has reached a thickness of approx. 4 millimetres; however at least once a year. A good time for defrosting is when the appliance is empty or contains only little food.

➡ Each temperature rise reduces the keeping qualities of your frozen food. Around 12 hours before defrosting your freezer, switch over to fast freeze to build up a low temperature reserve in the frozen food.



### Warning!

- Do not use electrical heating appliances or any other mechanical or artificial devices to speed up the defrosting process.
- Do not use defrosting sprays, they can be hazardous to your health and/or contain substances that damage plastics.

**Caution!** Do not touch frozen food with wet hands. Your hands could freeze to the food.




Remove frozen food, wrap it in several layers of newspaper and store it, covered, in a cool place.



Switch off the appliance and unplug it, or pull the fuse or switch off the circuit breaker.



Remove all drawers except the bottom one. The bottom drawer serves as a practical container to collect the water from the thawing ice. Pull out the drawer and insert the plastic scraper in the special location to act as an extension channel to collect the defrost water.

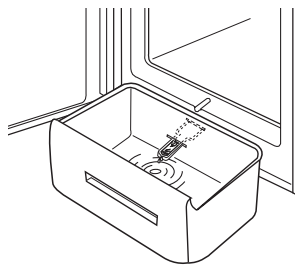

**Tip:** To speed up the defrosting process, place a pan with warm water in the appliance and close the door.

Remove pieces of ice that have fallen before they completely defrost.



After defrosting, thoroughly clean the freezer compartment and interior fittings.



### Warning!

- The appliance may not be connected to the mains during cleaning. Danger of electrical shock! Before cleaning switch the appliance off and remove the plug from the mains, or switch off or turn out the circuit breaker or fuse.
- Never clean the appliance with a steam cleaner. Moisture could accumulate in electrical components, danger of electrical shock! Hot vapours can lead to the damage of plastic parts.
- The appliance must be dry before it is placed back into service.




### Important!


- Ethereal oils and organic solvents can attack plastic parts, e.g.
  - lemon juice or the juice from orange peel;
  - butyric acid;
  - cleansers which contain acetic acid.

Do not allow such substances to come into contact with appliance parts.

- Do not use any abrasive cleansers.

 Clean the appliance and the interior accessories with a cloth and lukewarm water. Commercially available dish washing detergents may also be used.


 After cleaning wipe with fresh water and rub dry.

 After everything is dry, switch to fast freeze. After running the appliance for two or three hours, it is ready again for storing frozen food.

## Magnetic door seal


After opening and closing the door of your freezer whilst it is in operation, you will not immediately be able to open the door again because a vacuum will have developed inside, keeping the door closed until the pressures inside and outside the door have equalised. After a few minutes you can easily reopen the door.


## Switching off the appliance


 To switch off the appliance, turn the temperature regulator to position "0".


**If the appliance is not going to be used for an extended period:**

 Remove all deep-frozen packages as well as ice-trays.




 Switch off the appliance by turning the temperature regulator to position "0".

 Remove the mains plug or switch off or turn out the circuit breaker or fuse.

 Defrost freezer and clean thoroughly (see section: "Defrosting and Cleaning").

 Leave the door open to avoid the build up of odours.

## If you should ever move house

-  If the freezer compartment is not fully loaded, pack the frozen food all together on as few storage levels as possible: drawers (1) and (2).
-  24 hours before the removal lorry is due to leave switch over to fast-freezing in order to build up a reserve of coldness in the frozen items.
-  Make sure the freezer door cannot come open during transport.  
Ensure that the freezer is the last item loaded onto the removal lorry, so that it is the first to be taken off and can be plugged in again at once.



## Energy Saving Tips

- Do not install the appliance near cookers, radiators or other sources of warmth. High ambient temperatures cause longer, more frequent operation of the compressor.
- Ensure sufficient air circulation and exhaust at the appliance base and at the back wall of the appliance. Never cover air vent openings.
- Do not place warm foods into the appliance. Allow warm foods to cool first.
- Only leave door open as long as necessary.
- Do not set temperature any colder than necessary.
- Check the storage temperature in the freezer on the thermometer.
- Put frozen food in the fridge to defrost. The cold in the frozen food will then be used to cool the fridge.
- Keep the heat emitting condenser, the metal grille on the rear wall of your appliance, always clean.

## What to do if ...

### Correcting Malfunctions

Spare parts:

Minor repairs you can carry out yourself, spare parts can be ordered from the service centre. You can fit these yourself without any special skill or training, e.g.:

- freezer drawers,
- door handle

A malfunction may be caused by only a minor fault that you can rectify yourself using the following instructions.

Please check whether the pilot lights come on, the refrigerating unit operates, and the internal temperature is being maintained. Do not perform any other work on the appliance if the following information does not provide assistance in your specific case.



**Warning!** Repairs to refrigerators/freezers may only be performed by competent service engineers. Improper repairs can give rise to significant hazards for the user. If your appliance needs repairing, please contact your specialist dealer or our Customer Service.



If the freezing mechanism has stopped working, the reserve in the cold accumulator and in the deep-frozen food itself, if the freezer is full, will be sufficient for about 27 hours, or about 18 hours if there is no cold accumulator.

Malfunction	Possible Cause	Remedy
Appliance does not work, no pilot light is illuminated.	Appliance is not switched on.	Switch on the appliance.
	Mains plug is not plugged in or is loose.	Insert mains plug.
	Fuse has blown or is defective	Check fuse, replace if necessary.
	Socket is defective.	Mains malfunctions are to be corrected by an electrician.
Green light does not light up, yellow light lights up when the fast freeze function is activated.	Green light faulty.	Please inform your customer service.
Yellow light does not light up, when the fast freeze function is activated, appliance is on.	Yellow light faulty.	Please inform your customer service.
Appliance cools too much.	Temperature is set too cold.	Turn the temperature regulator to a warmer setting temporarily.

Malfunction	Possible Cause	Remedy
The freezer temperature is not sufficient, red light lights up, temperature alarm signal sounds.	Temperature is not properly adjusted.	Please look in the "Initial Start Up" section.
	Door was open for an extended period.	Open the door only as long as necessary. Press the fast freeze switch.
	A large quantity of warm food placed in the appliance within the last 24 hours.	Press the fast freeze switch.
	The appliance is near a heat source.	Please look in the "Installation Location" section.
Heavy build up of frost, possibly also on the door seal.	Door seal is not air tight (possibly after changing over the hinges).	Carefully warm the leaking sections of the door seal with a hair dryer (not hotter than approx. 50 °C). At the same time shape the warmed door seal by hand such that it sits correctly.
Unusual noises.	Appliance is not level.	Readjust the feet.
	The appliance is touching the wall or other objects.	Move the appliance slightly.
	A components, e.g. a pipe, on the rear of the appliance is touching another part of the appliance or the wall.	If necessary, carefully bend the component out of the way.
The compressor does not start immediately after changing the temperature setting.	This is normal, no error has occurred.	The compressor starts after a period of time.

**Important:** regularly check on the red temperature pilot light and thermometer that the storage temperature is being maintained.

---

## Service & Spare Parts

In the event of your appliance requiring service, or if you wish to purchase spare parts, contact your local AEG Service Force Centre by telephoning:

**0870 5 929 929**

Your call will be automatically routed to the Service Centre covering your post code area.

In guarantee customers should ensure that the above checks have been made as the engineer will make a charge if the fault is not a mechanical or electrical breakdown.

Please note that proof of purchase is required for in-guarantee service calls.

## Help us to Help You

Please determine your type of enquiry before writing or telephoning. When you contact us we need to know:

1. Your name, address and post code.
2. Your telephone number.
3. Clear and concise details of the fault.
4. The model number and serial number (see rating plate).
5. Date of purchase.

## Customer Care

For general enquiries concerning your AEG appliance and for further information on AEG products, contact our Customer Care Department by letter or telephone, as follows:

Customer Care Department  
AEG Domestic Appliance Limited  
55-77 High Street  
Slough  
Berkshire  
SL1 1DZ  
Tel: 08705 350350

## Regulations, Standards, Guidelines

This appliance was designed for household use and was manufactured in accordance with the appropriate standards. The necessary measures in accordance with appliance safety legislation regulations (GSG), accident prevention regulations for refrigeration appliances (VBG 20) and the regulations of the German Society of Electrical Engineers (VDE) were observed in the manufacture of this appliance. The refrigerant circuit has been checked for leaks.

**CE** This appliance is in accordance with the following EU guidelines:

- 73/23/EEG dated 19 February 1973 - low voltage guidelines.
- 89/336/EEG dated 3 May 1989  
(including guideline change notice 92/31/EEG) - EMV guideline



AEG Hausgeräte GmbH

Postfach 1036

D-90327 Nürnberg

<http://www.aeg.hausgeraete.de>

© Copyright by AEG

H 271 286 200-01-0299

2222 704-42



**This file has been downloaded from:**

[www.UsersManualGuide.com](http://www.UsersManualGuide.com)

User Manual and User Guide for many equipments like mobile phones, photo cameras, mother board, monitors, software, tv, dvd, and othes..

Manual users, user manuals, user guide manual, owners manual, instruction manual, manual owner, manual owner's, manual guide, manual operation, operating manual, user's manual, operating instructions, manual operators, manual operator, manual product, documentation manual, user maintenance, brochure, user reference, pdf manual